


Felhasználói kézikönyv

D100



service@lingdu.us

Válasz mindössze 12 órán belül

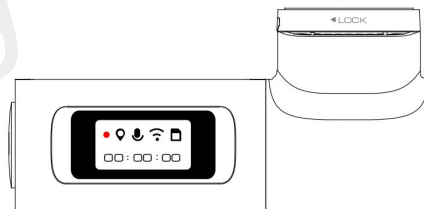

LINGDU

www.lingdu.us

www.lingdu.us



FCC azonosító: 2ASWVD100

V20230629

D100



service@lingdu.us

A kézikönyv letöltéséhez olvassa be a QR-kódot



1. Ügyfélszolgálat



Hibás vagy sérült elem?

Pontatlan leírás? Hiányzó alkatrészek
vagy kiegészítők?

A teljesítmény vagy a minőség nem megfelelő? Ő volt

Rossz tételt küldtek?



service@lingdu.us

Válasz mindössze 12 órán belül

Kérjük, vegye fel velünk a kapcsolatot az áru visszaküldése előtt.

Segítünk megoldani bármilyen problémát.

a legszebb.



Jegyzet:

1. A műszerfali kamera használatához **U3-as microSD-kártya** szükséges (nem tartozék).

(a szállítás részei). Az első használatkor formázza a microSD kártya
műszerkamerával együtt.

2. MINDIG használd a áramellátáshoz. Mivel benne van
beépített superkondenzátor (memóriához, 1 mAh-s lítium csak használatos
fém akkumulátor).

2. Fontos biztonsági tudnivalók

Köszönjük, hogy megvásárolta ezt a LINGDU műszerfal kamerát.

Ez a felhasználói kézikönyv a műszerfal működtetésével kapcsolatos információkat tartalmaz.
műszerkamera használata ezt az útmutatót

a megfelelő használat érdekében.

A termék teljesítményének javítása érdekében az ebben foglaltakat
nélkül

- Ne szerelje szét, ne javítsa vagy módosítsa saját maga a terméket .

Azt tűz, áramütés vagy meghibásodás. Ellenőrzésre és javításra
szolgáltatásért

- Ha idegen tárgy kerül a termékbe, azonnal húzza ki a konnektorból.
tápkábel.

a szolgáltatáshoz és kérjen javítást.

- Vezetés közben állítsa be a terméket.

Azt baleset. a termék telepítése és beállítása
helyen álljon meg vagy parkoljon le a járművel

- Ne telepítse a terméket olyan helyre, ahol zavarhatja
a vezető látómezeje.

Azt baleset.

- Ne használjon sérült vagy módosított tápkábelt.

Csak a gyártó által szállított kábeleket használja.

A sérült vagy módosított tápkábel robbanást, tüzet vagy hibás működést
okozhat.

- Ne kezelje a terméket nedves kézzel.

Azt áramütés.

- Ne telepítse a terméket magas páratartalmú vagy gyúlékony környezetbe
gázok vagy folyadékok.

Azt robbanás és/vagy tűz.

- Ne hagyja a terméket csecsemők, gyermekek vagy háziállatok közelében.

állatokat. Fennáll a veszélye a kis és/ vagy lenyelésnek

nyáluk a termékre kerül, ami robbanás.

be rövidzár.

- Az autó belsejének tisztításakor ne permetezzen vizet vagy viaszt közvetlenül az autóra
termék.

Azt tűz, áramütés vagy meghibásodás.

- Ha a tápkábel füstöl vagy szokatlan szaga van

szagolja, azonnal húzza ki a konnektorból.

a szolgáltatáshoz vagy az Ön forgalmazója.

- Tartsa tisztán a tápkábel érintkezőit.

IN megtörésről és tűz.

- Használja a megfelelő bemeneti feszültséget.

IN robbanás, tűz vagy meghibásodás léphet fel.

- Csatlakoztassa szorosan a tápkábelt, hogy ne lehessen könnyen kihúzni.

lekapcsolni.

IN tűz keletkezhet.

- Ne takarja le a terméket semmilyen anyaggal.

Az termék deformációja vagy tűz. Termék és

a periféria használód tovább

3. A dobozban

az alábbi elemek műszerfalának
felszerelésével.

mindegyikhez

4. Műszaki adatok


Modell	D100
Nyílás	F=1,8
Szín	fekete
Nyelv	/ japán / német / francia / spanyol / olasz /
Memóriakártya	Micro SD kártya Class 10, U3 sebesség, maximális támogatás 256 GB (nem tartozék)
Videó kód	H.264
Fotó formátum	JPG
Videó tömörítés Rezsím	MP4
Videó felbontás	2560 x 1440P 30 képkocka másodpercenként 1920 x 1080P 30 képkocka másodpercenként
WiFi	Beépített
Akkumulátor	Beépített szuperkondenzátor
Teljesítmény interfész	5V/1A
Üzemi hőmérséklet	-20°C és 70°C között (-4°F és 158°F között)




Jegyzet:

1. A termék teljesítményének javítása érdekében a jelen
nélkül

5. Termékdiagram

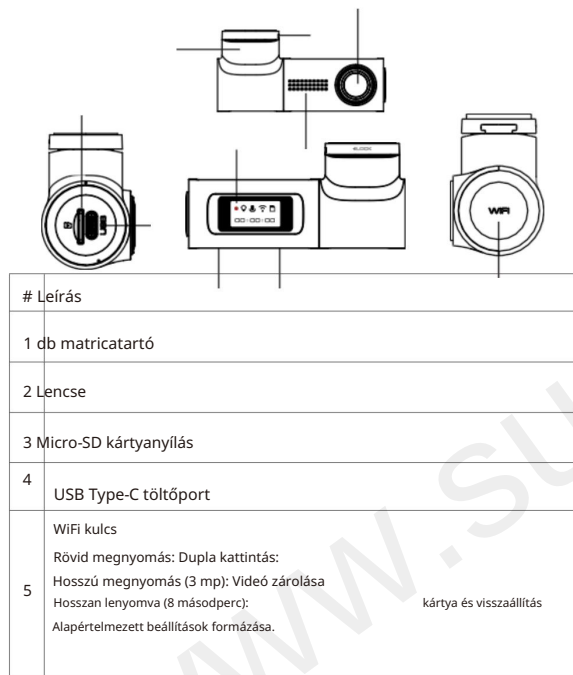

6	Hangszóró
7	0,96 hüvelykes kijelző
8	Mikrofon
9	Reset gomb
10	GPS

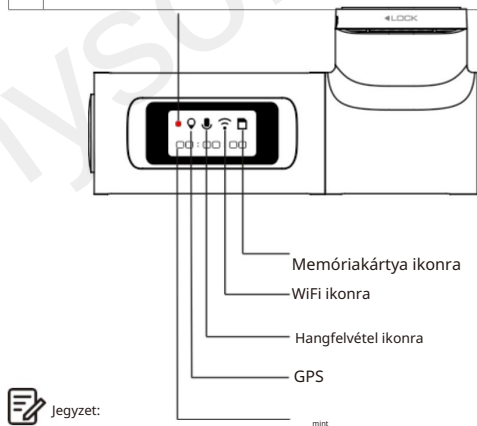

Jegyzet:

Normál felvétel közben az óra látható, míg
Vészhelyzeti felvétel közben a videó szegmens rögzítési
hossza jelenik meg.

	Szín	Állami
REC	 Blinging	Normál videó rögzítése
	 Blinging	Rögzített videó rögzítése

6. Kezdjük

A fényképezőgépet úgy tervezték, hogy automatikusan bekapcsoljon és rögzítsen, amint hatalmat kap. Ezután automatikusan menti a videót, kapcsolja a jármű leállítását.

1. Automatikus be-/kikapcsolás:

a konnektorba cigareta. Amikor az autó motorja csatlakoztassa, a műszerfal automatikusan bekapcsol, és rekord. A kulcs LOCK állásba fordítása után a felvétel automatikusan mentésre kerül és kikapcsol.

2. Kézi be-/kikapcsolás

be: ki: egyszer és tartás tápegység. időtartamú áramellátás 2 másodpercig.



Jegyzet:

1. A műszerfal használatához U3 microSD kártya (nem tartozék) szükséges. Az első használatkor formázza a microSD kártya műszerkamerával együtt.

2. MINDIG használjon az áramellátáshoz. Mivel beépített superkondenzátort (emlékezzen egy 1 mAh-s csak abban használják lítium-fém akkumulátorra).

3. A műszerfal automatikusan frissíti a LINGDU APP-ot a telefonon mikor van WiFi.


4. U teherautók/személygépjárművek A 12 V-os szivargyújtó aljzat mindig FORRÓ, ami azt jelenti, hogy folyamatosan áram alatt van, egyenesen amikor ki van kapcsolva, Ha az az Ön járműve, majd az automata aljzat van

Az ON/OFF funkció nem működik. És ha elhagyja a kamerát rögzítse, ha az autó kikapcsolt állapotban van, akkor lemerül az akkumulátor a tiéd és lehet, hogy nincs elég energiád az autó indító sípjára. A helyzet orvoslásához tegye a következők egyikét:

a műszertárat a biztosítékdobozhoz. autó használata automatikus

Változás a biztosítékdobozban 12 V-os aljzatok aljzatonként, amely csak az ACC-t vagy az ON-t a járműből a pozícióba látja el árammal.


7. Telepítés

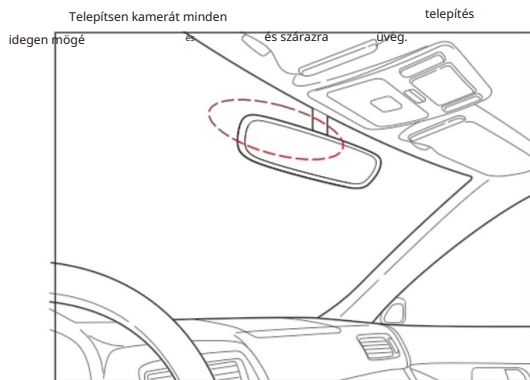

1. Helyezze be a kamerát a kijelölt helyre, amíg a helyére nem kattan (hasznájon nagy sebességű, 10-es vagy újabb micro-SD-kártyát).

2. Helyezze a kamerát a megfelelő helyre, amely nem takar el semmit a kilátásban, és telepítéskor minden idegen mögé és üveg. Húzza le a védőréteget az elektrosztatikus matricáktól és elektrosztatikus matricáktól az üvegen, hogy megakadályozza a statikus felhalmozódást. 3. Húzza le a védőfóliát a kétdarabos szalagról, és állítsa be az objektív szögét az elektrosztatikus kamerához képest.


kamerák

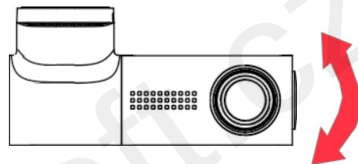


4. Csatlakoztassa a szivargyújtó tápkábelét és

üveg és

cigaretettát a fiókba, emelje fel a széléit
tápkábel.

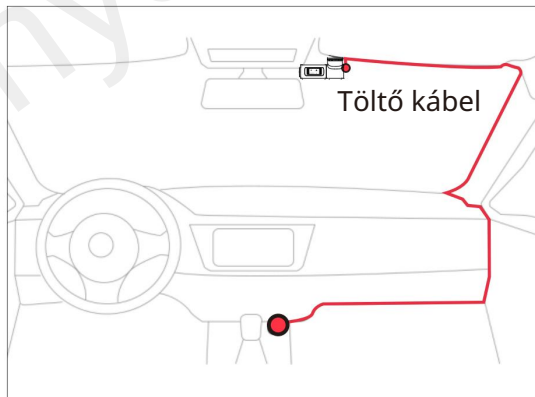


5. motor. a kamera bekapcsol és rekord.
A videófájlok automatikusan mentésre kerülnek a kamerakártyára rögzíti és kikapcsol.

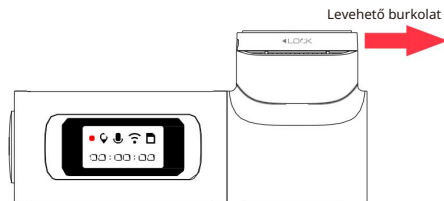

8. Videófájl lejátszása okostelefon segítségével

8.1 Valós idejű videó ellenőrzése okostelefon segítségével

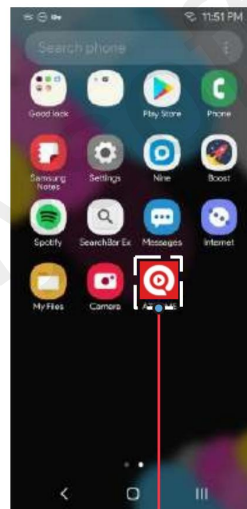

Olvassa be a QR-kódot és
töltse le a LINGDU alkalmazást
APP

- 1 LINGDU keresése
alkalmazások a Google Play áruházban
vagy Apple App Store és
telepítse a sajátjába
okostelefon.




2

Lépjen a Telefonbeállítások > Wi-Fi > Válassza a Dash Cam Wi-Fi lehetőséget. A Wi-Fi-hez való csatlakozás után a "Nincs internetkapcsolat" üzenet jelenik meg, ami normális volt.

Mivel a Wi-Fi dash cam CSAK videó/fénykép átviteli funkcióra szolgál, NEM arra tervezték, hogy felvételeket sugározzon a felhőbe vagy az internetre, ezt a felszólítást figyelmen kívül hagyja.

WiFi SSID név: D100 Alapértelmezett *****

JELSZÓ: 12345678

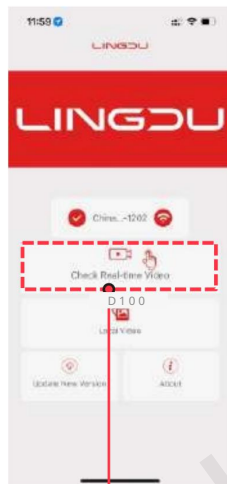


3

Sikeres csatlakozás után Megjelenik a műszerkamerával ellátott D100 modell. Nyomja meg a "Valós idejű videó ellenőrzése" gombot. Megjelenik a videó élő előnézeti felülete.



4


Most megtekintheti jelenleg valós időben rögzített videót, ha okostelefont csatlakoztat a műszer kamerához Wi-Fi Directen keresztül.

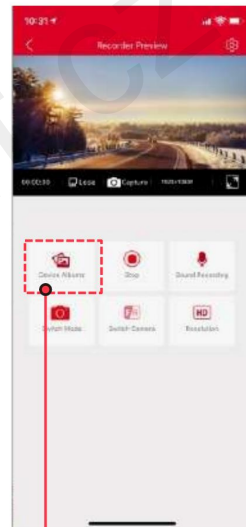


5

Először állítsa le a felvételt, majd nyomja meg az „Eszközalbum” gombot a fényképek, videók és vészhelyzeti fájlok letöltéséhez.

8.2 Videófájl letöltése okostelefonjára

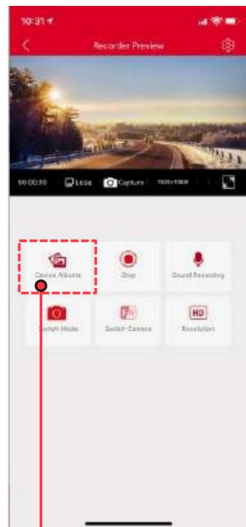


1 Lépjen a felületre műszerfal kamera nézet. Először állítsa le a felvételt, majd nyomja meg a "Készülékalbum", gombot a fényképek, videók és vészhelyzeti fájlok letöltéséhez.

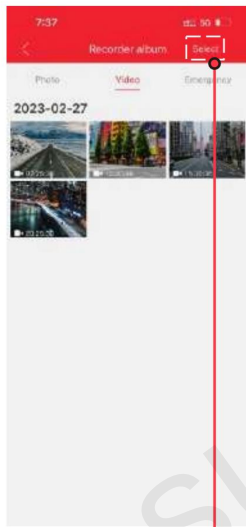

2 Válassza ki az okostelefonra letölteni kívánt videófájlokat.



3 Videófájlok letöltéséhez nyomja meg az ikont. Egyetlen videófájl letöltése azonban eltart egy ideig.

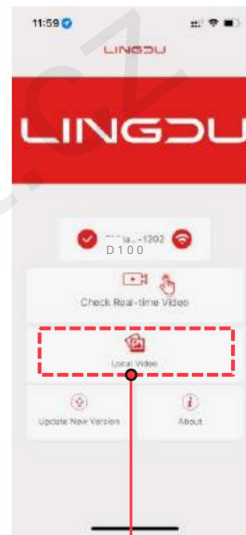

4 Ezeket a letöltött videófájlokat ezután az eredeti felület menüjében találja meg APP névvel "Helyi videó".

Az alkalmazás nem jelenít meg élő videót a telefonon. Csak a kijelzők
kép a strandról?

Mobil adatok hogy az élő videó nem jelenik meg. Ha az alkalmazás
Az APP nem jelenít meg élő videót a mobiladatai "LINGDU".

telefonon. hogy a helyi „LINGDU” be van kapcsolva.

1. iOS esetén: „Vezeték nélküli adatok” -on


Válassza a „WLAN” lehetőséget.

2. Régebbi iOS esetén: adatok”.

”Mozgó

Legújabb iOS

Régebbi iOS

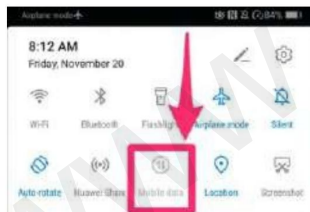

Jegyzet:

1. WiFi Direct funkció a 2.

okostelefon

WiFi 10 méteren belül.

Utána a LINGDU APP dátuma automatikusan frissül
és

3. A LINGDU iOS 9.0 és újabb Android 5.0 és
verziókhöz érhető el.

Mi az a WiFi funkció?

A WiFi funkciót úgy alakították ki, hogy párosítsa a műszerfalat okostelefonjával,
és azonnal hozzáférjen a műszerfalhoz. Itt vannak videók a családdal. a rekord kedvéért

Könnyen megtekintheti, letöltheti és megoszthatja
mint te beszélő

Bluetooth az okostelefonhoz vezeték nélküli zenehallgatáshoz, valamint
Az autós műszerkamerák WiFi jelet használnak (Bluetooth helyett).
okostelefon párosítása a LINGDU D100 kamerával.

Megnézhetek távolról videókat az autóm körül?

NEM. A LINGDU D100 dash cam NEM felhőalapú vagy internetes
streamelésre szolgál. Ez NEM felhő vagy IP kamera, és NEM bárki számára készült.

A LINGDU dash cam APP-ban élő videót kaphat, és ha 10 lábön belül
tartózkodik a műszerfalai kamerától.

Mi a WiFi hatótávolsága?

A WiFi jel tartománya az 10 láb, ha nincs olyan, hogy otthoni WiFi-ként nincs
jeled akkor a WiFi hatótávolsága 10 ft-től a kicsitől

WiFi otthonon kívül,

A LINGUO APP telepésekor egy előugró ablak jelenik meg a következőkkel: válassza az "Alkalmazás használata" lehetőséget, hogy a LINGUO alkalmazás hozzáférjen az Ön tartózkodási helyéhez, és válassza az "Engedélyezés" lehetőséget, hogy a LINGUO alkalmazás hozzáférjen az eszközben lévő fényképekhez és médiához .

Miután első alkalommal csatlakozott az internethez, meg kell adnia az "Engedélyezés" lehetőséget, hogy az alkalmazás hozzáférjen az Ön

Ami kb 10-15 a WIFI hálózatra D100, a „No

nem jeleníti meg az alábbi előugró ablakot vagy értesítést. Koppintson
 a másodperceken belül megjelenő felugró értesítésre, és
 válassza ki, hogy szeretne bár nincs ilyen
 internetezni. Miután kiválasztotta ezt a lehetőséget, OK

The Wi-Fi network "LINGDU
D100_066438" does not
appear to be connected
to the Internet

Do you want to temporarily use cellular data?


Use Cellular Data

Keep Trying Wi-Fi

Ha ezt az ablakot látja iPhone-ján a funkció használatával
Wi-Fi, koppintson a WiFi-re." A kamera lekapcsolja a WiFi-
t, és ezután megteheti
el kell feleltetnie a LINGDU WiFi-t, majd párosítania kell, hogy működjön.



9. Általános beállítások

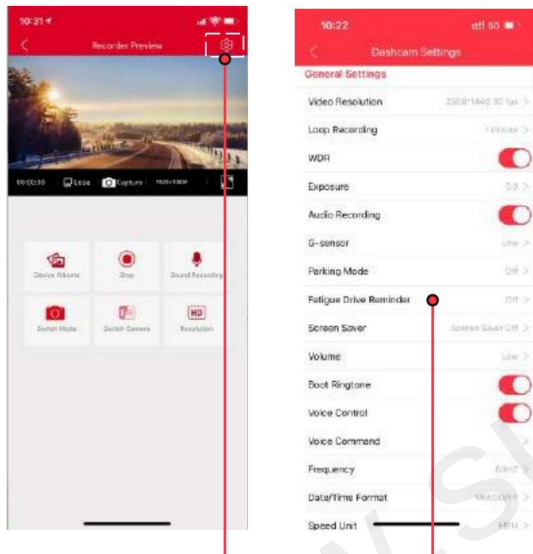

1 Lépjen a Dashcam felületre Előnézetek. Először állítsa le a felvételt, majd nyomja meg a beállítások ikont.

2 Válassza ki, mit szeretne beállítani.

9.1 Videobeállítások

Videó felbontás

válassza ki a kívánt videó felbontást, és egy másodperc.

2560x1440P @30fps (alapértelmezett) / 1920x1080P 30fps

Hurokfelvétel – 1 perc (alapértelmezett)/3 perc/5 perc

A felvételhez válassza ki az egyes videoklipek hosszát (1/3/5 jegyzőkönyv). Ez a funkció felvétel egy műszerkamerán.

a kártya dashcam után van automatikusan törli a legregebbi fájlokat, hogy helyet adjon az újaknak felvételeket. Azaz hogy nélküli felvételen

WDR - be (alapértelmezett)/ki

A WDR a "Wide Dynamic Range" rövidítése, ami azt jelenti, hogy a kamera vagy a kijelző képes kezelni a nagy fényerőkülönbséggel rendelkező jeleneteket, így a részletek a sötét területeken is megjelennek.

Expozíció –3.0/ -2.0/ -1.0/ +0.0 (alapértelmezett)/ +1.0/ +2.0/ +3.0

Módosítsa a videó megvilágítási beállításait (lézse vagy sötétebb videó szerint.

Hangfelvétel – be (alapértelmezett)/ki

A műszerkamera rendelkezik mikrofon hang és videó rögzítéséhez. Választás szerint KI opciók Videofelvétel némítása.

G-érzékelő - KI / Alacsony (alapértelmezett) / Közepes / Magas

A G-szenzor ütéserő a gyorsulásmérő észlelni egy fizikai és műszerfalon. Egykor a fizikai G-szenzor be

vagy kapcsolja be a kamerát, az aktuális videófájl lesz
vészfájlként, hogy ne ciklusfüggvény legyen
Minél nagyobb a G-szenzor érzékenysége, annál kisebb lesz az erő.
hogyan automatikus fájlvédelem.

Parkolási mód

Ez a funkció CSAK a 3-Lead Hardwire Kittel, hogy az telepítve
működik. Ez a parkolási mód opciókat tartalmaz. hogy



Jegyzet:

Az új funkció használatához egyedi tervezésű Type-C 3 az 1-ben készletre van szükség.

Lead Hardwire Kit. Nincs csomagolás,

az Amazonon: **C típusú 3 vezetékes vezetékes készlet LINGDU-hoz**

D100 műszerfal

*Kapcsolódó parkolási mód:

1. Amikor leállítja a motort, és a videófelvételi. Majd
fényképezőgép LEÁLL pozícióba, és automatikusan rögzít 1
rezsím képkocka/mp sebességgel. hogy
2. Ha eltalálja az autóját, és az ütközés eléri a készletet
G-szenzor, kamera 1 perces folyamatos videó rögzítése,
elmenti és zárolja ezt a videót az Események mappában, majd visszatér az 1 képkocka/
mp-es rögzítéshez.
3. Most, amikor legközelebb elindítja a járművet, a kamera automatikusan
parkolási módba lép. Ezután automatikusan normálra
videó módba lép, és elindul videófelvétel.

* Parkolási mód ütközésérzékelővel:

1. Amikor leállítja a motort, és pozicionálni Aztán a kamera
LEÁLL videófelvétel és ütközésérzékelő módba
és a kamera kikapcsol.
találkozni fog
2. Amikor a kamera ütközésérzékelő módban, ha
az autóra, és a hatás eléri a készüléket G-szenzor, kamera
bekapcsol, majd 1 perces folyamatos videó rögzítése, mentése és
zárolja ezt a videót az Események mappában, majd a kamera kikapcsol.
3. A jármű következő indításakor a kamera automatikusan visszatér a következőre
normál videó módban, és elindul videófelvétel.

*Normál parkolási felvételi mód:

1. Amikor leállítja a motort és pozicionálni Kamera
az normál felvételnél.
2. Most, hogy a kamera ütközésérzékelő módban van, ha az autóra kerül, és
ha az ütközés eléri a beállított értéket, a kamera zárolja az aktuális G-szenzor,
videókliptet a videóban az Események mappában > ezt menti és zárolja
akkor a kamera normálban
felvétel.

Vezetési fáradtságra emlékeztető - kikapcsolva (alapértelmezett) / 2H

Amikor aktiválja ezt a funkciót, a műszerfal 2 óránként hangjelzést ad, hogy figyelmeztesse
Önt. hogy te vagy Fáradtan vezetni.

Képernyőkímélő – képernyővédő ki (alapértelmezett)/ki
képernyő 1 perc múlva

Képernyő kikapcsolva: Ez a képernyő mindig bekapcsolva lesz.
Képernyő kikapcsolása 1 perc után: 1 perc után kikapcsol . a képernyőt

Hangerő - Ki / Alacsony (alapértelmezett) / Közepes / Magas

Ez a funkció készlet kötet
hang , kamera hangszóró belső
hangereje.

Indítási csengőhang – Be (alapértelmezett)/Ki

Ez a funkció be/ki kamerahívás.

Hangvezérlés - be (alapértelmezett)/ki

Csak a felvételt WiFi bekapcsolása, kép, kikapcsolás
támogatja, WiFi kikapcsolva, felvétel, videókat



Jegyzet:

90% és emberek aktiválják, kapcsolja ki a környékben
Ha beállítja ezt a funkciót a
LINGDU APP.

Hangutasítás

Mondd ki. de csak az angolt támogatják

• A Wi-Fi bekapcsolásához Kapcsolja be a WiFi-t

• A Wi-Fi kikapcsolásához, •

Pillanatfelvétel készítéséhez, • Az

aktuális videofájlok zárolásához , • Felvétel elindításához, •

Felvétel leállításához, • Képernyőhöz,

Kapcsolja ki a WiFi-t

Kézikönyv képet

Videó zárolása.

Felvétel megnyitása

Kapcsolja ki a felvételt

Nyissa meg a képernyőt

Kapcsolja ki a kijelzőt

• A képernyő kikapcsolásához

Frekvencia - 50 Hz / 60 Hz (alapértelmezett)

Ide szeretne válassza ki a frekvenciát a használt tápegység specifikációi szerint
eljutni az országába a tiéd pozíciókat.

Dátum/idő formátum

Ez a funkció

válassza ki a dátumformátumot.

Sebesség mértékegysége - KM/H/MPH (alapértelmezett)

Válasszon az MPH és a KMH között.

GPS információ

Ellenőrzés műhold / hossz / / sebesség.

9.2 Sebesség

videobélyegek

A feltöltött fájlokban megjelenő sebességbélyeg be-/kikapcsolása.

GPS információ

A rögzített fájlok be-
és kikapcsolása .

GPS-bélyegző látható

Dátum/idő

Kapcsolja be/ki a dátum/idő megjelenítését a rögzített fájlokon.

LOGO

A LINGDU logó be- és kikapcsolása A feltöltött fájlokon megjelenő bélyegző.

Modell

A feltöltött képeken megjelenő modellbélyegző be- és kikapcsolása
fájlokat.

9.3 Beállítások

időzóna

rendszer

-UTC/GMT -7:00 (alapértelmezett)

-UTC/GMT -12:00 - UTC/GMT +12:00

Itt válassza ki a helyi zóna beállításait a megfelelő

vannak az UTC/GMT értékek. Ez

beállításhoz

egy zenekar.

A tiédet a <https://www.timeanddate.com/time/map/> oldalon találhatod meg
helyes GMT (Greenwich Mean Time) értéket



Jegyzet:

A LINGDU D100 rendelkezik

GPS, először be kell állítani a zónát az alkalmazásban ,

hogyan a dátum és az idő helyes legyen a videón. hogy

LINGDU APP alkalmazást, és használja a funkciómenüt az idő beállításához
zóna.

USA időzónák	Mikor van nyár? mint november - üres	Mikor kezdődik a nyár ? szezonon kívül - november
Hawaii	GMT (-10:00)	
Alaszka	GMT (-9:00)	GMT (-8:00)
Pacific Inc. Zóna	GMT (-8:00)	GMT (-7:00)
Hegy mint Zóna	GMT (-7:00)	GMT (-6:00)
Átlagos mint Zóna	GMT (-6:00)	GMT (-5:00)
Keleti zóna	GMT (-5:00)	GMT (-4:00)

időzónák Egyesült királyság	British Summer as	Brit tél mint
	GMT/UTC +1	GMT/UTC ±0

szinkronizálásként

Szinkronizálás telefon ezzel a D100 műszerfal kamerával.

SD-kártya adatai

Tekintse meg a memóriakártyán fennmaradó helyet.

SD-kártya formázása

A formázási folyamat biztosítja, hogy a kártya fájlrendszer-formátuma megfelelő legyen kamerára optimalizálva.



Jegyzet:

Megjegyzés: A stabil teljesítmény érdekében cserélje ki a kártyát minden 1-2

formátum

Két Micro-SD kártyaformátum létezik

1. és tartsa lenyomva a WiFi-t 10 másodpercig

formázás és alapértelmezett beállítások, a sikeres formázás után

hallani fogja a "di" hangot.

gombbal érheti el a LINGDU APP-t a funkciómenü használatával

2. „Formátum” néven.

WiFi név

Itt

WiFi név az APP-ban, alapértelmezett név:

D100_*****

WiFi jelszó

Itt

WiFi jelszó az APP-ban, alapértelmezett jelszó: 12345678.

Alapértelmezett beállítások

Állítsa vissza a műszerfal alapbeállításait. A rekordjaid nem fognak

Firmware verzió

Itt

ellenőrizze a telepített firmware aktuális verzióját

kamera. A jövőben ellenőrizni fogja ezt az információt, hogy megtudja, elérhető-e.

firmware verzió.

száma


10. Videófájlok lejátszása számítógépen

1. microSD kártya a műszerkamerából.

2. Helyezze be a kártyát

microSD kártyák és

öt a számítógéphez.

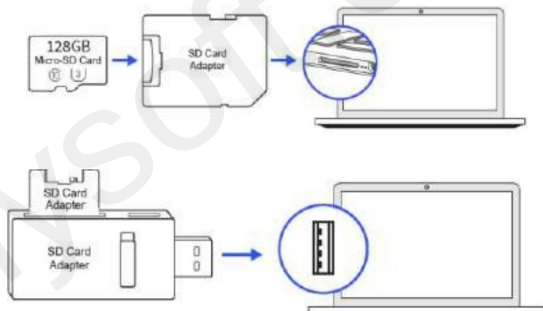

3. Attól függően

merevlemezeket

képes más nevet

legyen egy flash meghajtó "D", "E" vagy az alatti meghajtóként,

találni. A meghajtó keresése után kattintson rá duplán

és megkapja

az alkatrészekhez

amelyek tartalmazzák a Normál, az Esemény és a

Fotó mappákat. Normál Normál felvételi mód menti a videófájlokat

melyik

az övök

be

tárolóhely. Eventűl rögzítési módban

Az esemény egy videófájl lesz

és

használatával törölve

rögzítési funkció be

FotoEz a mentési mappa

fényképeket.

Ha videókat akarsz

Kattintson duplán az n-re.

használja

VLC Media Player, amely ingyenesen letölthető

a letöltést: www.videolan.org.

4. A LINGDU GPS Player az címről is letölthető

www.lingdu.us > Támogatás > Letöltések és telepítés

számítógép.

5. Telepítse a(z) (Megjegyzés:

LINGDU GPS lejátszó. vagy

Kérem, szoftver, megerősítjük,

figyelman kívül hagyja a víruskereső azonnali

hogyan nem lesz benne az Ön

hatását

6. Kattintson a gombra

fájlok"

böngésszen és válasszon

Film vagy EMR mappa bekapcsolva

microSD be

LINGDU GPS

Játékos. A Normál vagy az Esemény mappában lévő összes fájl megjelenik, vagy

Parkolás. Vagy

is

videó fájlokat

a képernyőn

7. Videó lehet

A, Kattintson a Fájl megnyitása ikonra a kívánt mappa kiválasztásához, majd kattintson

rá

nem

válasszon CSAK egy mappát ehhez

és

lát semmilyen videofájlt).

B, Válassza ki a

kívánt videofájlt

és

korong

kártyákat, válasszon

fájlt a


IN

GPS információk lekéréséhez.



11. Firmware frissítés

1. microSD kártya a műszerkamerából.
2. Helyezze be a kártyát microSD kártyák és őt a számítógéphez.

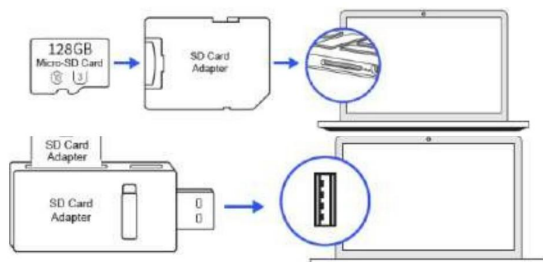

3. te D100 firmware a www.lingdu.us webhelyről

> Támogatás > Letöltött fájlok a számítógépen.

4. Csomagolja ki a letöltött firmware-t (Zip fájl), és másolja ki a fájlt

"FW96562A.bin" nevű firmware-t a kártyára

microSD.

5. kamera neked be a kocsiba és frissítési folyamat

firmware. mutató frissítés, ami azt jelenti

hogy a D100 dash cam új firmware-re frissül.

Firmware frissítés legfeljebb 1 percet vesz igénybe. Kérem

hogy firmware frissítés nem szakad meg

tápegység. A firmware frissítése után a fényképezőgép automatikusan kikapcsol.

Firmware verzió 6 kapcsolja be és ellenőrizze a beállításokat

APP > Firmware verzió.

12. Hangutasítások

Gyors hang	Leírás
Vészhelyzeti videó	felvétel, amint a G elindul érzékelő
WIFI BE	Alapértelmezett BE, bekapcsolás után hogy az
WIFI kikapcsolva	Nyomja meg és tartsa lenyomva 3 másodpercig a kikapcsoláshoz, Wi-Fi azt.
Memóriakártya hiba	Rossz/rossz/hamis memóriakártya
Indítsa el a felvételt	Bekapcsolás után és meghívott /művelet alkalmazás, azt
A felvétel leállt	Ellenőrzés alkalmazás, azt
Úgy hangzik, mint "kattintás"	kép az alkalmazás segítségével, neki
Sikeres formázás	Sikeres formázás kártyákat
A formázás nem sikerült	Formázás kártyák vannak sikertelen
A parkolási mód be van kapcsolva	A parkolási mód be van kapcsolva
A parkolási mód ki van kapcsolva	A parkolási mód ki van kapcsolva

13. A LEGBIZONYOSBB KÉRDÉSEK

1. kérdés: A kamera automatikusan be-/kikapcsol?

hogy a kimenő áramot az autóból. elérje az 5 V/1,5 A feszültséget, és használja a mi

2. kérdés: A videó kép elmosódott?

védőfólia és üveg zsírmentes, és hogy az

3. kérdés: A kamera felmelegszik?

Normális, hogy a fényképezőgép felmelegszik nagy sebességű videó rögzítéskor. (legfeljebb 158°F/70°C). Mivel műszerkamera használatáról van szó

4. kérdés: A videofájlokat nem lehet lejátszani a számítógépen?

A műszerkamera videofájlok MP4 formátumúak, és előfordulhat, hogy nem kompatibilis, ha nincs telepítve a megfelelő szoftver

számára

5. kérdés: A videónak nincs hangja?

Győződjön meg arról, hogy a „Hangfelvétel” beállítás be van kapcsolva.

6. kérdés: A videó homályos?

A Dash Cam minimális gyújtótávolsággal rendelkezik

Az ennél az értéknél közelebbi objektumok lesznek

2 méter.
elmosódott.

7. kérdés: Hangutasítás Memóriahiba?

A nem minősített SD-kártyák vagy kártyák használata befolyásolja a műszerfalra kamera teljesítményét és a műszerfalról készített felvételt. már el

munka, TF, minősített kártyáról van szó mely követelmények a dashcam felvételéhez. újraindul. Ha nem vegye fel velünk a kapcsolatot és szerezzen újat kártya.

14. Értesítés

 Ez a termék megfelel az európai követelményeknek a rádió interfészhez.

 Ez a szimbólum azt jelenti, hogy a terméket nem szabad a hulladékként kezelni háztartási hulladékkal, és megfelelő újrahasznosítóba kell leadni segít megővni a termék erőforrások, az emberi egészség és a környezet Más ártalmatlanítására és újrahasznosítására vonatkozó információkat a helyi önkormányzattal szerezheti be hol vagy ez szolgáltatások vagy in

Megvették a terméket.

 vagy olyan módosítások, amelyek a párt jóváhagyta nincsenek összhangban a felhasználó a

művelet

Ez tesztelték, és a B szerint megfelelőnek találták, digitális 15 FCC-hogy szabályokhoz. Ezeket a határértékeket úgy alakították ki, hogy lakossági telepítést és szerű védelmet nyújtson a káros interferencia biztosítson. Ez ellen, amikor a berendezés

energiát hoz létre, használ és használ, és ha nem az utasításoknak megfelelően telepítik és használják, akkor a rádiókommunikáció káros interferenciája ellen. Nincs azonban garancia arra, hogy egy adott telepítés során nem lép fel interferencia.

Ha ez káros interferencia a rádió vagy
televízió ami ki- és bekapcsolásával meghatározható
a felhasználónak próbálja meg egy vagy több interferenciát kiküszöbölni

többet a következőkből

-- vagy antennák.

-- közötti távolság és megkapjuk.

-- egy másik áramkör konnektorába, mint amelyikhez tartozik

csatlakoztatva --

Forduljon a kereskedőhöz vagy egy tapasztalt rádió- és televíziószerelőhöz.

Ez 15 FCC-szabály előírása. Művelet

a következő feltételeknek kell megfelelni: (1) ez nem megengedett

káros interferenciát, és (2) ezt el kell fogadnia

minden interferencia, nem kívánt interferencia

forgalom.

Ez számára megállapított FCC expozíciós határértékek

ellenőrizetlen Ez lenne telepítve és

legalább 20 cm távolsággal kell működtetni és

Ezt nem szabad vagy működtetni

másik antennával ill

Szállító/forgalmazó

Sunnyssoft sro
Kovanecka 2390/1a
190 00 Prága 9

Csehország
www.sunnyssoft.cz


User Manual

D100



service@lingdu.us

Response in just 12 hours

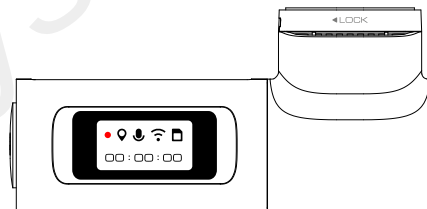

Product | Car Dashcam
Manufacturer | Dong Guan KAKA Electronic Technology Co., Ltd.
Address | No.395,HuanshiEast Road Shitanpu Tangxia Town
Dongguan CN. 518000
Product Warranty | One-Year Limited Warranty
Customer Support | service@lingdu.us

www.lingdu.us



FCC ID: 2ASWVD100

LINGDU

www.lingdu.us

Table of Contents

English	01
---------------	----



service@lingdu.us

Scan QR code to download Manual



Index

1. Customer Service.....	2
2. Important Safety Information	3
3. In The Box.....	5
4. Specification.....	6
5. Product Diagram.....	7
6. Getting Started	9
7. Installation	11
8. Playing Video Files Using Your Smartphone	14
9. General Setting.....	23
10. Playing Video Files Using Your Computer	32
11. Firmware Update.....	35
12. Voice Prompts	36
13. FAQ.....	37
14. Notice	38

1. Customer Service

-  Defective or damaged item?
Inaccurate description?
Missing parts or accessories?
Performance or quality not adequate?
Wrong item was sent?



service@lingdu.us

Response in just 12 hours

Contact us before returning the item.
We will help you resolve any issue asap.



Note:

1. **A U3 type microSD card (Not included)** is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.
2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

2. Important Safety Information

Thank you for purchasing this LINGDU dashcam.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.

·Do not disassemble, repair, or modify the product yourself.

Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.

·If any foreign matter gets inside the product, detach the power cord immediately.

Contact the service center for repair.

·Do not adjust the product while driving.

Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.

·Do not install the product in a location where the product can interfere with the driver's field of vision.

Doing so may cause an accident.

·Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.

Damaged or modified power cords may cause an explosion, fire, or malfunction.

·Do not operate the product with wet hands.

Doing so may cause electric shock.

·Do not install the product in an environment with high humidity, or combustible gases or liquids.

Doing so may cause an explosion and/or fire.

·Do not leave the product near infants, children, or pets.

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

·Do not spray water or wax directly onto the product while cleaning the inside of the car.

Doing so may cause fire, electric shock, or malfunction.

·If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.

Contact the service center or your distributor.

·Keep the terminals of the power cord clean.

Failure to do so may cause excessive heat and fire.

·Use the correct input voltage.

Failure to do so may cause explosion, fire, or malfunction.

·Plug in the power cord firmly so that it cannot easily be disconnected.


Failure to do so may cause fire.

·Do not cover the product with any material.


Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.

3. In The Box

Check the box for each of the following items before installing the dash cam.

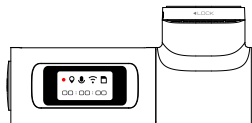

Dash camera x1




Electrostatic films x2



Type-C car charger
with 3.5m/12ft cable x1



Cable clips x 5
Pry tool x 1



User manual x 1




Note:

1. To improve the performance of the product, the contents of this manual are subject to change without prior notice.

4. Specification


Model	D100
Aperture	F=1.8
Color	Black
Language	English / 日本語 / Deutsch / Français / Español / Italiano / Русский.etc
Memory Card	Micro SD Card Class 10 , U3 Speed, Max Support 256 GB (Not included)
Video Code	H.264
Photo Format	JPG
Video Compression Mode	MP4
Video Resolution	2560 x1440P 30fps 1920 x1080P 30fps
WiFi	Built-in
Battery	Built-in Super Capacitor
Power Interface	5V/1A
Operation Temperature	-20°C to 70°C (-4°F to 158°F)

5. Product Diagram

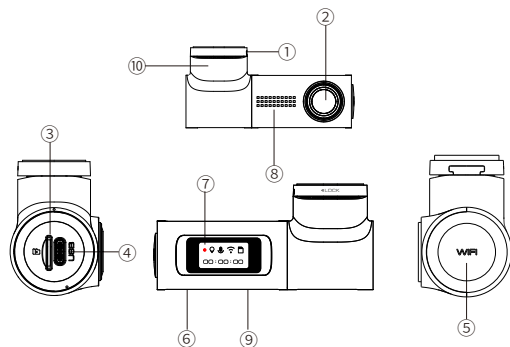

#	Description
1	Sticker mount
2	Lens
3	Micro-SD card slot
4	Type-C USB charging port
5	WiFi Key Short press: Turn on/off WIFI Double click: Turn on/off audio Long press (3s): Lock video Long press (8s): Format memory card and restore default settings.

6	Speaker
7	0.96 inch display
8	Microphone
9	Reset button
10	GPS

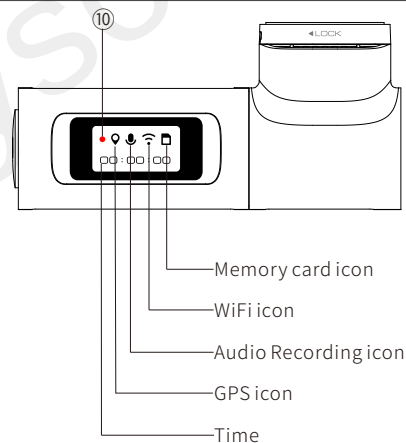

Note:

The clock is displayed during normal recording, while the recording duration of the locked video segment is displayed during emergency recording.

	Color	Status
⑩ REC	 Blinking	Recording normal video
	 Blinking	Recording locked video

6. Getting Started

The camera is designed to power up and record automatically when it receives power. Then saves the video record and turns off automatically when the car shuts off.

1. Auto Power ON/OFF:

Plug car charger to cigarette lighter socket. When the car engine is on, dash cam will turn ON and start recording automatically. When the car key is turned to LOCK position, dash cam automatically saves the recording and turns OFF.

2. Manual Power ON/OFF

Manually Turn ON: Press the power button once.

Manually Turn OFF: Press and hold the power button for at least 2 seconds.



Note:

1. A U3 type microSD card (Not included) is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.

2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

3. The dash cam will automatically update its time when it is connected to the LINGDU APP on a phone via WiFi.


4. Some trucks/cars's 12V cigarette outlet is always HOT, which means it provides constant power even when the car is turned off and locked. If this is the case for your vehicle, then the auto ON/OFF feature will not work. And if you leave the camera continuously recording when the car is turned off, then it will drain your car/truck's battery and you might not have enough power to start your car for next time. To remedy this situation, you can do one of the two options:

① Hardwire your dash cam to your car's fuse box with 3-Lead Auto Trigger Hardwire Kit.


② Change the connection in the fuse box for your 12V outlet to socket which only supplies power when car key is turned to ACC or ON position.

7. Installation


Install the front camera behind the rear view mirror. Remove any foreign matter and clean and dry the windshield before installation.

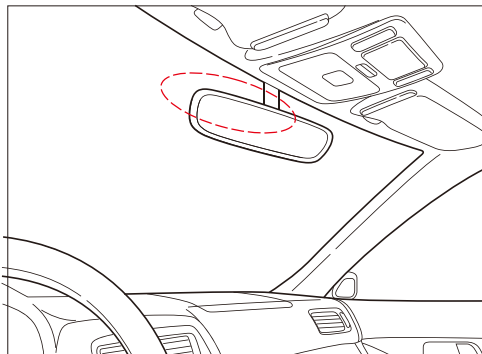


1. Turn off the engine, gently push the card into the slot until it locks into place. (Please using class 10 or above high-speed U3 micro-SD card)
2. Find a suitable place on windshield where don't obstruct the driver's field of vision and remove any foreign matter and clean and dry the windshield before installation. Tear off the protective layer of the electrostatic sticker and adhere the electrostatic sticker to the windshield to prevent mark/glue on your windshield after removing it.
3. Peel off the protective film from the double-sided tape and attach the front camera to the electrostatic sticker. Adjust the angle of the lens by rotating the body of the front camera.

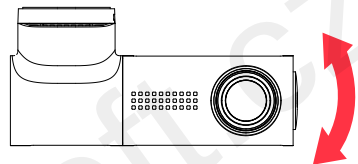

4. Plug the cigarette lighter power cable into the cigarette lighter socket and the front camera. Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

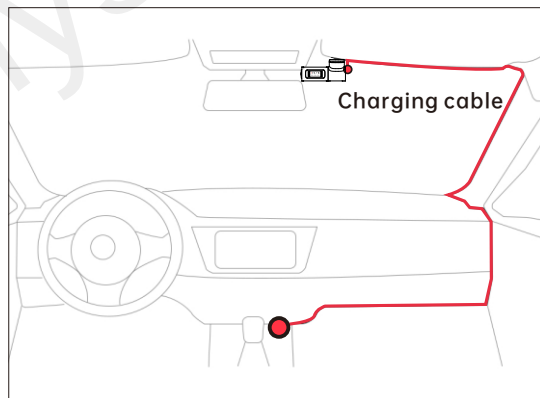


5. Turn on the engine. The dashcam will power up and start recording. Video files are stored on the microSD card. Turn off the engine. The dashcam will automatically stop recording and power down.

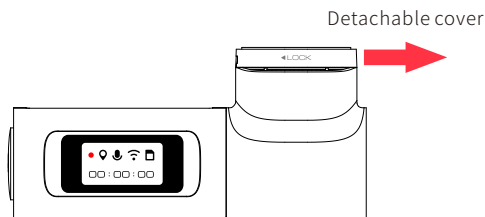

8. Playing Video Files Using Your Smartphone

8.1 Check real-time video using your smartphone

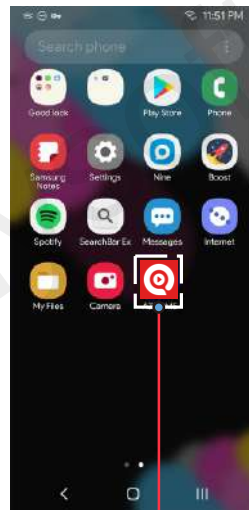


Scan QR code to
download LINGDU APP

1 Search for the LINGDU app in the Google Play Store or Apple App Store and install it on your smartphone.



2 Go to Phone's Settings > WiFi > Select WiFi of the dash cam. After it's connected to the WiFi, it will say 'No Internet Connection' which was normal. Because dash cam WiFi is ONLY for video/photo transfer function, NOT made to broadcast footage over the cloud or internet, please ignore the prompt.


WiFi Name SSID: D100 *****
Default PASSWORD: 12345678

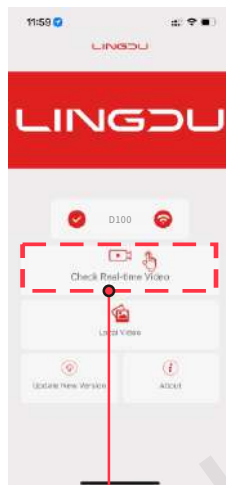

3 There will show dash cam model D100 when connect successfully. Press "Check Real-time Video" to live video preview interface.




4 Now you can view the video currently being recorded real-time by connecting your smartphone to the dashcam via Wi-Fi Direct.

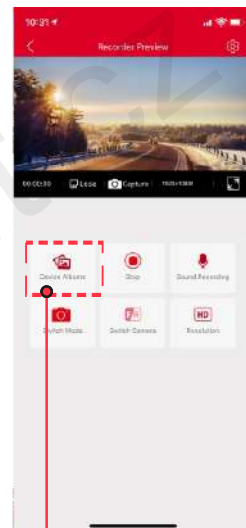


5 Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.

8.2 Download the video files into your smartphone

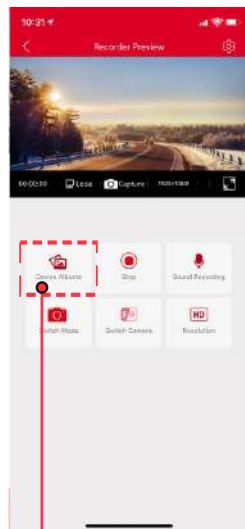


1 Go to Dashcam Preview interface. Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.

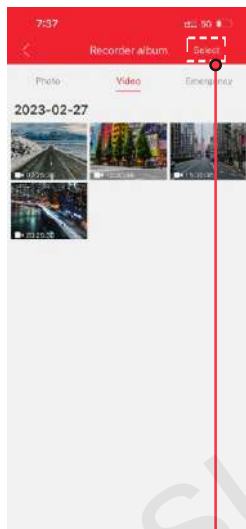

2 Select the video files to download into your smartphone.



3 Press the icon to download the video files. However, it will take a bit of time to download one video file.

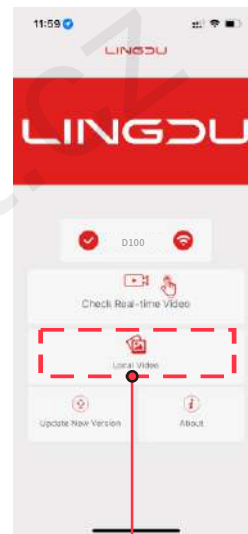


4 Then you can find these downloaded video files in APP original interface menu named 'Local Video'.

The app won't show the live video on your phone. It only shows a picture of the beach?

The cellular data will cause the live video not to be viewed. If the APP won't show the live video, please disable the 'LINGDU' cellular data of your phone. Sure that the Local Network of the 'LINGDU' is turned on.

1. For Latest iOS System: Setting→LINGDU→Click 'Wireless Data'→Select 'WLAN'.

2. For Older iOS System: Setting→LINGDU→Disable the 'Cellular Data'.

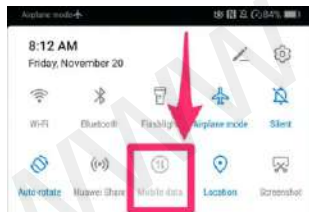

Note:

1. WiFi Direct lets you directly connect your smartphone to your dash cam via WiFi within a range of 10FT.
2. Once it is connected to the LINGDU APP it will automatically update the date/time.
3. The LINGDU is available for devices running Android 5.0 and higher, or iOS 9.0 and higher.

What is a WiFi Feature?

The WiFi feature has been designed so you can pair your dash camera wirelessly with your smartphone and access your recording instantly from the dash cam. Here you can view, download and share your videos easily with your friends and family. Just like how you would connect your Bluetooth speaker to your smartphone for wireless music play, the same way dash cameras use WiFi signal (instead of a Bluetooth) to pair your smartphone with LINGDU D100.

Can I watch the videos around my car remotely?


NO. LINGDU D100 dash cam is NOT made to broadcast footage over the cloud or internet. It is NOT a cloud or an IP camera and it is NOT meant to do that. You can get live video and footage on LINGDU dash cam's APP as long as you stay within the 10FT range from the dashcam.

What is the WiFi Range?


The WiFi signal range is about 10FT when there are NO obstructions in the middle. Please NOTE that just like your home WiFi network, you don't have WiFi signal outside your home, the same way, WiFi range is 10FT from this small device.

For Android phones:


When installing the LINGDU APP, it will have two pop-up prompts, select 'While using the APP' to allow LINGDU to access this device's location, and select 'Allow' to allow LINGDU to access photos and media on your device. There is one extra step you will have to take for the first time. Once you connect to the WiFi of D100, it will say 'No Internet'. Which is fine. Wait about 10-15 seconds until you see the below pop up or notification. You just have to tap on the pop up notification that will show up in few seconds to select that you still want to stay connected even though there is NO Internet. Once you select this OK, you are set to go.

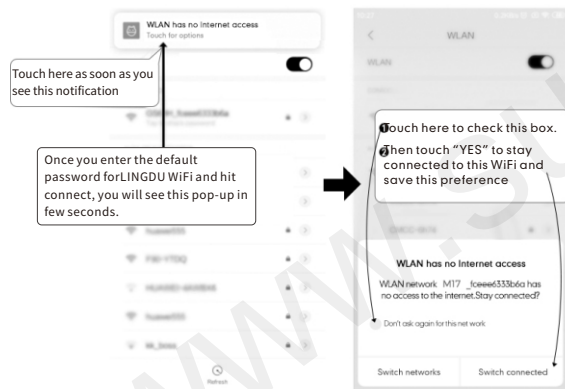

For iPhone:

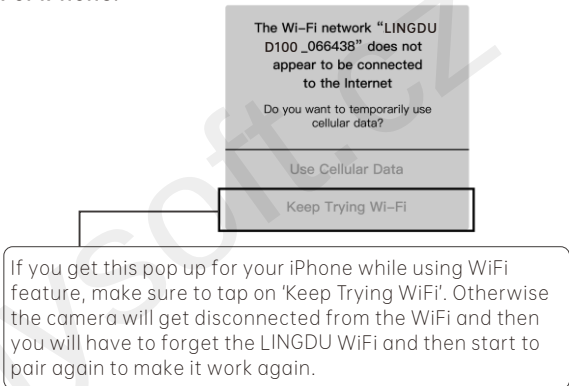

9. General Setting

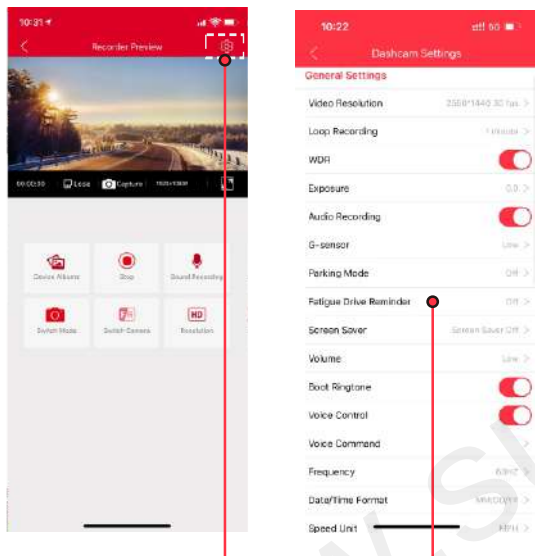

1 Go to Dashcam Preview interface.
Please STOP recording first, then press the settings icon.

2 Select what you need to set.

9.1 Video Settings

Video Resolution

Allow to choose the desired video resolution and fps(frames per second).

2560x1440P @30fps (Default) / 1920 x1080P 30fps

Loop Recording — 1min(Default)/ 3mins/5mins

Please select the length of each video clip (1/3/5 minutes) for loop recording. This function enables continuous recording on the dash cam. Please note that when the memory card becomes full, the dash cam will automatically delete the oldest files to make space for new recordings. This ensures that it can continue recording without interruption.

WDR— On(Default)/Off

WDR stands for "Wide Dynamic Range," which means the camera or display can adapt to scenes with large differences in brightness, allowing details in both dark and bright areas to be clearly displayed.

Exposure — -3.0/ -2.0/ -1.0/ +0.0(Default)/ +1.0/ +2.0/ +3.0

To adjust video exposure setting for either brighter or darker video according to your preference.

Audio Recording — On(Default)/Off

The dashcam has built-in microphone to record audio with video. You can choose to record mute video by choosing OFF.

G-Sensor — Off/ Low(Default)/ Medium/ High

G-sensor is a 3-axis impact gravitational accelerometer, designed to detect physical and gravitational forces on the dash cam. Once G-sensor has been triggered due to physical

or gravitational impact force on the camera, the current video file will be locked as an emergency file so it won't be deleted by loop cycle function. The higher the G-Sensor sensitivity is, the less force will be needed to trigger automatic file protection.

Parking Mode

This function will ONLY work when 3-Lead Hardwire Kit is installed properly. This parking mode has three options to choose from.



Note:

Custom-designed Type-C 3-Lead Hardwire Kit is required to use this new feature. Not included in the packaging, on Amazon search: **Type-C 3-Lead Hardwire Kit for LINGDU D100 Dash Cam**

*Time-Lapse Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the timelapse 1fps recording mode automatically.
2. Now while this timelapse is being recorded, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will start to record 1-min continuous video, save & lock that video in Event folder > then return to the timelapse 1fps recording.
3. Now when you start your car for the next time, the camera will automatically STOP the timelapse parking mode. Then it will go into normal video mode automatically to start the continuous video recording.

*Collision Detection Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the impact detection mode and the camera will turn OFF.
2. Now while the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will turn ON > then it will start to record 1-min continuous video, save & lock that video in Event folder > then the camera will turn OFF.
3. Now when you start your car for the next time, the camera will automatically go back into normal video mode automatically to start the continuous video recording.

*Normal Recording Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. The camera will continue to record normally.
2. Now the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will lock the current looping video clip, save & lock that video in Event folder > then the camera will continue to record normally.

Fatigue Driving Reminder— Off(Default)/ 2H

When you activate this feature, the dash cam will beep every 2 hours to remind you if you are experiencing fatigue while driving.

Screen Save— Screen Saver Off(Default)/ Screen Off After 1-Min

Screen Saver Off: This screen will always be on.

Screen Off After 1-Min: The screen will turn off after 1 minute of inactivity.

Volume — Off/ Low(Default)/ MID/ High

This feature allows you to set the volume level for the boot sound volume, prompt volume through camera's internal built-in speaker.

Boot Ringtone — On(Default)/ Off

This feature allows you to turn ON/OFF the camera's Boot Ringtone.

Voice Control — On(Default)/ Off

ONLY support English: turn on WiFi, take picture, turn off recording, turn off WiFi, open recording, lock the video



Note:

Kindly be informed that the voice control feature has an accuracy of approximately 90%, and it may get activated unintentionally due to surrounding environmental noises. Hence, if you do not require this function, you can deactivate it from the settings menu in the LINGDU APP.

Voice Command

Say a command, but ONLY support English

- To turn on WiFi, say **Turn on WiFi**

- To turn off WiFi, say **Turn off WiFi**
- To take a picture, say **Take picture**
- To lock the current video files, say **Lock the video**
- To start recording, say **Open recording**
- To stop recording, say **Turn off recording**
- To open screen, say **Open screen**
- To turn of screen, say **Turn off display**

Frequency — 50HZ/ 60HZ(Default)

Here you should choose the frequency accordingly to your power supply specification used in your country based on your geographical location.

Date/Time Format

This feature allows you to select the date format.

Speed Unit — KM/H/MPH(default)

Choose between MPH and KMH.

GPS Info

Check the satellite number / Longitude / Latitude / Speed.

9.2 Video Stamps

Speed

Turn On/Off the Speed Stamp shown on recorded files.

GPS Information

Turn On/Off the GPS Information Stamp shown on recorded files.

Date/Time

Turn On/Off the Date/TimeStamp shown on recorded files.

LOGO

Turn On/Off the LINGDU logo Stamp shown on recorded files.

Model

Turn On/Off the Model Stamp shown on recorded files.

9.3 System Setting

Timezone

-UTC/GMT -7:00 (Default)

-UTC/GMT -12:00 to UTC/GMT +12:00

You can select your local time zone setting here, based on the UTC/GMT value. It's important to ensure that you set the correct time zone first.

Go to <https://www.timeanddate.com/time/map/> to find out your Correct GMT (Greenwich Mean Time) value.



Note:

LINGDU D100 is built-in GPS, need to set Timezone first in APP so that the video date/time stamp will be correct. Please connect to LINGDU APP, using the function menu to set Timezone.

USA Time Zones	When Daylight Savi-ngs Ends Nov - March	When Daylight Savi-ngs Begins March - Nov
Hawaii	GMT (-10:00)	
Alaska	GMT (-9:00)	GMT (-8:00)
Pacific Time Zone	GMT (-8:00)	GMT (-7:00)
Mountain Time Zone	GMT (-7:00)	GMT (-6:00)
Central Time Zone	GMT (-6:00)	GMT (-5:00)
Eastern Time Zone	GMT (-5:00)	GMT (-4:00)

UK Time Zones	British Summer Time	British Winter Time
	GMT/UTC +1	GMT/UTC ±0

Synchronization Time

Sync the time of the phone to this D100 dash cam.

SD Card Information

Display remaining storage space on the memory card.

Format SD Card

The formatting process will make sure that the card's file system format is optimized for the camera.

Note:

Note: For stable performance, it is recommended that you format the memory card every 1-2 months.

There are two ways to format Micro-SD card

1. Press and hold WiFi button for 10 seconds to format and default settings, you will hear sound "di" when format successfully.
2. Please connect to LINGDU APP, using the function menu named "Format" to do.

WiFi Name

Here you can change the WiFi Name in APP, the default name: D100_*****

WiFi Password

Here you can change the WiFi Password in APP, the default password: **12345678**

Default Settings


Reset the Dash Cam to default settings. Your recordings will not be affected.

Firmware Version

Here you can check the current firmware version installed on your camera. You will need this information in the future to check if newer version of firmware is available.

10. Playing Video Files Using Your Computer

1. Remove the microSD card from the dashcam.
2. Insert the card into a microSD card reader and connect it to your computer.

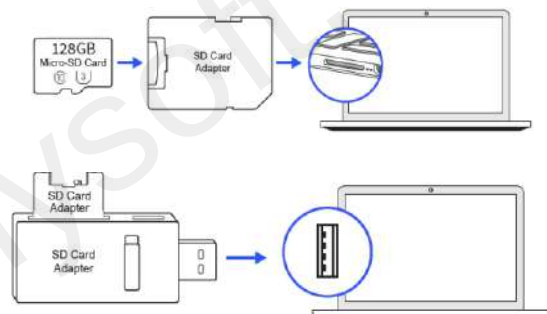

3. Depending on the pre-installed hard drives, you should be able to locate the added flash drive as drive "D," "E," or another name. Once you have located the drive, double-click it to access the file folders, which include Normal, Event, and Photo.

Normal: Normal recording mode saves video files in a loop, allowing them to be overwritten when storage space is needed.

Event: In Event recording mode, the video file will be locked and protected from deletion by the loop recording function.

Photo: This is the folder for storing captured photos.

To play the videos, simply double-click on them.

We recommend using VLC Media Player, which can be downloaded for free at: www.videolan.org.

4. You can also download LINGDU GPS Player from www.lingdu.us > **Support** > **Downloads** and install it on your computer.

5. Install the LINGDU GPS Player on your computer. (Note: Please close or ignore the prompt of the anti-virus software, we confirm that it will not bring any security impact to your computer.)

6. You can click the 'Open Files' button to browse and select the Movie or EMR folder of the microSD card on the LINGDU GPS Player. It will show all files in the Normal or Event or Parking folder. Or you can also drag the video files directly to the launcher screen.

7. There are two ways to play video.

A, Click File-Open icon to choose the folder which you want to play, click to start play.

(Note that you can ONLY select one folder to play and see no video files)




B, Select from 'My Computer' and find the memory card disk, choose the video file you want to play, you can drag and drop the file directly to the player. You can get the GPS information on the player.



11. Firmware Update

1. Remove the microSD card from the dashcam.
2. Insert the card into the microSD card reader and connect it to a computer.

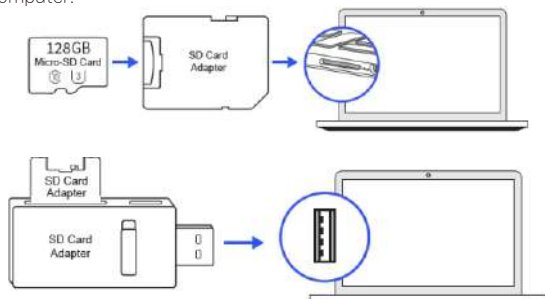

3. Download the latest D100 Firmware from www.lingdu.us > Support > Downloads on your computer.
4. Unzip the downloaded firmware (Zip file) and copy the firmware file named "FW96562A.bin" to the root directory of microSD card.
5. Connect the camera to the car charger to start the firmware update process. You should see the upgrade progress bar which means your D100 dash camera is updating the new firmware. Please NOTE:
The firmware update may take up to about 1mins. So please be patient. Make sure the POWER does NOT get disconnected while the firmware is being updated. Once the firmware is updated, the camera will turn OFF automatically.
6. You can turn on and check the latest firmware version by going into the APP's settings > Firmware Version.

12. Voice Prompts

Prompt Voice	Description
Emergency Video	During recording once G-Sensor triggered
WiFi ON	Default ON, after powered on, say it
WiFi OFF	Press and hold Wi-Fi button for 3s to switch off, say it
Memory card error	Wrong/bad/fake memory card
Recording started	After powered on and boot ringtone /operate via App, say it
Recording stopped	Operate via App, say it
Sound as "Click"	Take picture via App, say it
Format Successfully	Format memory card successfully
Format Failed	Format memory card failed
Parking mode is on	Parking Mode has been turned on
Parking mode is off	Parking Mode has been turned off

13. FAQ

Q1: Camera turns ON / OFF automatically?

Ensure that the output current can reach 5V/1.5A and use our car charger.

Q2: Video Image is blurred?

Remove the protective lens film, clean the lens, make sure the windshield is clean and clear of grease, dirt, and debris.

Q3: Camera gets HOT?

It is normal for your camera to run slightly hot. Due to video being recorded at high speed, the dash cam may be hot during using. (No more than 158°F/70°C).

Q4: Video Files cannot be played on my computer?

The video files from the Dash Cam are in MP4 format and may not be compatible with your PC if suitable playback software is not installed.

Q5: Video has no sound?

Ensure that 'Audio Recording' setting is turned ON.

Q6: Video is blurred?

The Dash Cam has a minimum focal range of around 2 meters. Objects closer than this are likely to become blurred.

Q7: Voice prompt Memory Error?

Using unqualified SD or third party cards can affect dashcam's performance and in some cases, force the dashcam to reboot randomly during recording. If it still can not work normally, it should be that the TF card is unqualified and can not meet the recording requirements of the dash cam. Please contact us to get a new memory card.

14. Notice

CE This product complies with the radio interface requirements of the European Community.

X This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.